ViewSonic®

Z70 Color Monitor

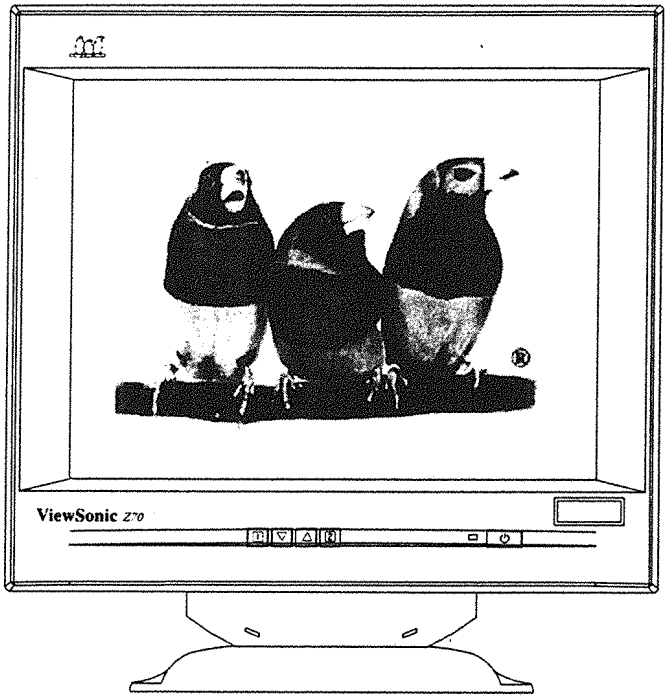

With Plug and Play +

Full 17" (16.0" Diagonal Viewable)

User's Guide

ユーザース・ガイド

用戶手冊

用户指南

사용자 설명서

Downloaded from www.Manualslib.com manuals search engine

Copyright © ViewSonic Corporation, 1999. All rights reserved.

Macintosh and Power Macintosh are registered trademarks of Apple Computer, Inc.

Microsoft, Windows, Windows NT, and the Windows logo are registered trademarks of Microsoft Corporation in the United States and other countries.

ViewSonic, the three birds logo, OnView, SonicTron, ViewMatch, and ViewMeter are registered trademarks of ViewSonic Corporation.

ENERGY STAR is a registered trademark of the U.S. Environmental Protection Agency (EPA).

VESA is a registered trademark of the Video Electronics Standards Association. DPMS and DDC are trademarks of VESA.

Disclaimer: ViewSonic® Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.

ViewSonic Corporation reserves the right to change product specification without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic Corporation.

As an **ENERGY STAR® partner,** ViewSonic Corp. has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

Electronic Warranty Registration

Register your monitor at **www.viewsonic.com**. It's fast, easy, and will simplify future support needs.

For Your Records

The serial number of this product is on the back of the monitor. Write the serial number of this unit in the space below and keep this booklet as a permanent record of your purchase to aid in identification in the event of theft or loss.

Model Name: ViewSonic Z70
Model Number: VCDTS21569-1
Serial Number: _____
Purchase Date: _____

Power Cord Safety Guidelines

Caution: Use a power cable that is properly grounded. Always use the AC cords listed below for each area:

USA ..... UL
Canada ..... CSA
Germany ..... VDE
Switzerland ..... SEV
Britain ..... BASEC/BS
Japan ..... Electric Appliance Control Act

In other areas, use AC cord which meets local safety standards.

Downloaded from www.Manualslib.com manuals search engine

Power Cord Safety Guidelines (continued)

AC PLUG CORD PRECAUTIONS FOR THE UNITED KINGDOM

FOR YOUR SAFETY PLEASE READ THE FOLLOWING TEXT CAREFULLY.

IF THE FITTED MOULDED PLUG IS UNSUITABLE FOR THE SOCKET OUTLET THEN THE PLUG SHOULD BE CUT OFF AND DISPOSED OF SAFELY.

THERE IS A DANGER OF SEVERE ELECTRICAL SHOCK IF THE CUT OFF PLUG IS INSERTED INTO AN APPROPRIATE SOCKET.

If a new plug is to be fitted, please observe the wiring code as shown below.

If in any doubt, please consult a qualified electrician.

WARNING: THIS APPLIANCE MUST BE EARTHED.

IMPORTANT: The wires in this mains lead are colored in accordance with the following code:

Green-and-Yellow:	**Earth**
Blue:	**Neutral**
Brown:	**Live**

If the coloured wires of the mains lead of this appliance do not correspond with the colored markings identifying the terminals in your plug, proceed as follows:

The wire which is colored GREEN-AND-YELLOW must be connected to the terminal in the plug which is marked by the letter E or by the Earth symbol ⏚ or colored GREEN or GREEN-AND-YELLOW.

The wire which is colored BLUE must be connected to the terminal in the plug which is marked with the letter N or colored BLACK. The wire which is colored BROWN must be connected to the terminal in the plug which is marked with the letter L or colored RED.

IMPORTANT NOTICE CONCERNING POWER CORD SELECTION

The power cord for this unit has been packed separately and has been selected according to the country of destination and must be used to prevent electric shock. Use the following guidelines if it is necessary to replace the original cord set.

The female receptacle of the cord set must meet CEE-22 requirements and will look like Figure 1 below:

Figure 1

For the United States and Canada

In the United States and Canada the male plug is a NEMA5-15 style (Figure 2) UL Listed and CSA Labelled. For units which are mounted on a desk or table, type SVT or SJT cord sets may be used. For units which sit on the floor, only SJT type cord sets may be used. The cord set must be selected according to the current rating for your unit. Please consult Table A below for the selection criteria for power cords used in the United States and Canada.

Figure 2



For European Countries

In Europe you must use a cord set which is appropriate for the receptacles in your country. The cord set is HAR-Certified, and a special mark that will appear on the outer sheath, or on the insulation of one of the inner conductors.

If you have any questions concerning which proper power cord to use, please consult with the dealer from whom you purchased your monitor.

Table A

Cord Type	Size of Conductors In Cord	Maximum Current Rating of Unit
SJT	18 AWG 16 AWG 14 AWG	10 Amps 12 Amps 12 Amps
SVT	18 AWG 17 AWG	10 Amps 12 Amps

Downloaded from www.Manualslib.com manuals search engine

FCC Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Warning:

To assure continued FCC compliance, the user must use the grounded power supply cord and the provided shielded video interface cable with bonded ferrite cores. Also, any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

Power Supply Cord USA

For units with 100 - 120V input voltage in the USA, use the following:
UL Listed and CSA Certified Type SVT or SJT No. 18/3 AWG rated 125Vac 7A min.
One end terminated in a molded on parallel blade, grounding attachment cap or hooded attachment cap (15A, 125V configuration), other end terminated in a mold-on appliance coupler.

Notice for Germany

The X-rays generated in this unit are shielded sufficiently. High voltage: Max. 30.0 kV. For ergonomic reasons, we recommend that you do not display blue characters on a dark background. Doing so may produce insufficient contrast that could lead to eye strain.

Notice for Japan

This equipment falls under the class B information Technology Equipment based on the standard established by the self-imposed Control Council for Radio interference through information-processing Equipment (VCCI). This equipment is designed to be used in a household environment, However, if it is used near radio and television receiver units, radio disturbances can occur. Use this equipment appropriately according to the instruction manual.

CE Conformity

CE

The device complies with the requirements of the EEC directive 89/336/EEC as amended by 92/31/EEC and 93/68/EEC Art. 5 with regard to "Electromagnetic compatibility", and 73/23/EEC as amended by 93/68/EEC Art. 13 with regard to "safety".

Required item	Relative to Standard Value	Relative to those Exceeding Standard Value	Remarks
EMI*	# 1		# 4
ESD*	# 2	# 3	
RADIATED RF*	# 1	# 3	
TRANSIENT F/B*	# 1	# 3	
LINE HARMONICS	# 1		

1: Satisfies the standards with no problems in performance and reliability.

2: Effects may appear temporarily on the screen but there will be no problem in reliability.

3: There is fear of the product breaking down.

4: If a signal cable other than that specified is used, it may be the cause of electromagnetic wave interruption of peripheral devices. To assure continued CE compliance the user must use the provided 1.8 m shielded video signal cable with bonded ferrite cores at both ends of the cable.

Handle correctly in accordance with the instruction manual.

*EMI: Electromagnetic Interference *ESD: Electrostatic Discharge *RF: Radio Frequency *F/B: Fast Burst

Downloaded from www.Manualslib.com manuals search engine

CONTENTS

ENGLISH

For Your Records 1
Power Cord Safety Guidelines 1
FCC Information 3
CE Conformity 3

Getting Started

Package Contents 5
Precautions 5
Quick Installation 6

Operation

Front Control Panel 7
OnView® Main Menu 8

Other Information

Specifications 11
Troubleshooting 12
Cleaning the Monitor 13
Limited Warranty 14
Customer Support ..... back cover

Downloaded from www.Manualslib.com manuals search engine

Getting Started

Congratulations on your purchase of an **ViewSonic *Z70*** color monitor. ***Important!*** *Save the original box and all packing material for future shipping needs.*

NOTE: This product was designed for operation in the magnetic fields of the hemisphere where it was purchased. Also, the word "Windows®" in this user guide refers to the following Microsoft® operating systems: Windows '95, Windows '98, Windows NT®.

ENGLISH

Package Contents

Your **ViewSonic *Z70*** package includes:

- **ViewSonic *Z70*** monitor
- Power cord
- Video cable
- INF and ICM installation files on CD-ROM diskette
- User's guide

IMPORTANT: The supplied **INF file** assures compatibility with Windows operating systems, and the **ICM file** (Image Color Matching) ensures accurate on-screen colors. ViewSonic® recommends that you install both files.

- For CD-ROM: Insert the CD-ROM into your system, wait for it to auto-install, select "Monitor Drivers", and follow the on-screen instructions.
- For diskette: Insert the diskette into your system, run **install.exe,** and follow the on-screen instructions.

Precautions

- For best viewing conditions sit at least 18" from the monitor.
- AVOID TOUCHING THE SCREEN WITH YOUR FINGERS. Oils from the skin are difficult to remove.
- NEVER REMOVE THE REAR COVER. The monitor contains high-voltage parts. You may suffer serious injury if you touch these parts.
- Avoid exposing the monitor to direct sunlight or another heat source. The monitor should be facing away from direct sunlight to reduce glare.
- Always handle your monitor with care when moving it.
- Choose a well ventilated area to position your monitor. Do not place anything on the monitor that prevents adequate dissipation of heat.
- Ensure the area around the monitor is clean and free of moisture.
- Keep the monitor away from magnets, motors, transformers, speakers, and televisions.
- Do not place heavy objects on the monitor, video cable, or power cord.
- If smoke, abnormal noise, or strange odor is present, immediately switch the monitor off and call your dealer or ViewSonic. It is dangerous to continue using the monitor.

Downloaded from www.Manualslib.com manuals search engine

Quick Installation

ENGLISH

1 Connect video cable

Make sure both the Z70 and computer are powered OFF. Connect the video cable to the computer.

Macintosh® user: Connect a Macintosh adapter (part No. VMAC-1) to the video cable, then to the Z70. To order an adapter, contact ViewSonic® (see the back cover of this guide). You will need to provide your Z70's serial number.

2 Connect power cord

Connect the power cord to a properly grounded AC outlet, then to the Z70.

3 Power-On computer and monitor

Power-ON the computer, then power-ON the Z70 monitor.

NOTE: At this point Windows® '98 users may receive a message asking them to install the Z70's INF file.

4 Install INF and ICM files

- For CD-ROM: Insert the CD-ROM, into your system, wait for it to auto-start, select "Monitor Drivers", and follow the on-screen instructions.
- For diskette: Insert the diskette into your system, run **install.exe**, and follow the on-screen instructions.

5 Windows users: Setting the Timing Mode

(Resolution and Refresh Rate)

Example: 1024 x 768 @ 75 Hz

Resolution Right-click on the Windows desktop > Properties > Settings > "Desktop Area". Set the resolution.

Refresh Rate (vertical frequency) See your graphics card's user guide for instructions.

6 Use the OnView® controls to adjust the screen image.

See Operation, pages 7-10

Installation is complete!

Enjoy your new Z70 Monitor!

To be best prepared for any future customer service needs:

- Write the serial number (see back of the monitor) in *"For Your Records"* on page 1 of this guide.

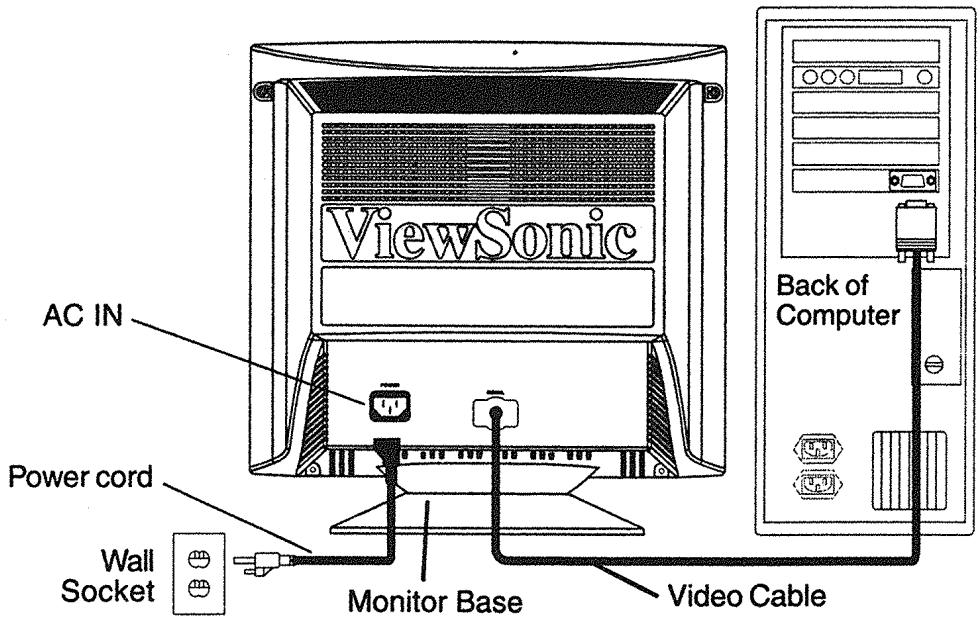

Downloaded from www.Manualslib.com manuals search engine

Operation

This section shows how to adjust your monitor for your personal preference.

Front Control Panel

To adjust the monitor, follow the numbered steps in sequence as shown below.

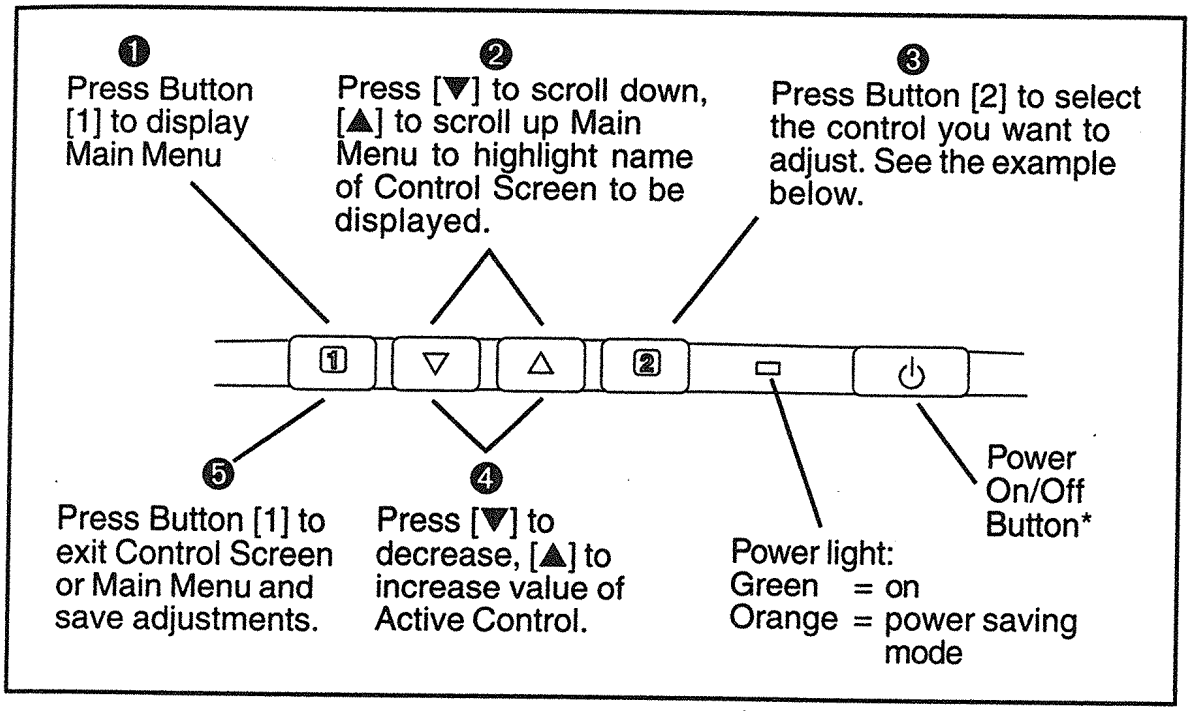

** Degaussing occurs automatically each time you turn the monitor on, removing buildup of magnetic fields that can affect color purity and convergence.* ***Do NOT degauss repeatedly.*** *Doing so can be harmful to the monitor.*

Downloaded from www.Manualslib.com manuals search engine

OnView® Main Menu

ENGLISH

MAIN MENU (1)	
	CONTRAST/BRIGHTNESS
	H/V POSITION
	H/V SIZE
	PINCUSHION/PIN BALANCE
	TRAPEZOID/PARALLEL
	TILT
EXIT: 1	SELECT: 2

MAIN MENU (2)	
	DEGAUSS
	VIEWMATCH COLOR
	LANGUAGE
	OSD POSITION
	MEMORY RECALL
	VIEWMETER
EXIT: 1	SELECT: 2

CONTRAST/BRIGHTNESS Press the 2 button to select one of the following controls.

Shortcut: Before displaying the Main Menu, press [▼] or [▲] to display the Contrast/Brightness control screen.

CONTRAST adjusts foreground white level of screen image. Press [▼] or [▲] to adjust.

BRIGHTNESS adjusts background black level of screen image. Press [▼] or [▲] to adjust.

H/V POSITION Press the 2 button to select Horizontal or Vertical Position.

H. POSITION (Horizontal Position) moves screen image left or right. [▼] moves screen image left, [▲] moves screen image right.

V. POSITION (Vertical Position) moves screen image up and down. [▼] moves screen down, [▲] moves screen up.

H/V SIZE Press the 2 button to select H. or V. Size.

H. SIZE (Horizontal Size) adjusts width of screen image. [▼] decreases width, [▲] increases width.

V. SIZE (Vertical Size) adjusts height of screen image. [▼] decreases height, [▲] increases height.

Downloaded from www.Manualslib.com manuals search engine

PINCUSHION/PIN BALANCE Press the 2 button to select Pincushion or Pin Balance.

PINCUSHION straightens vertical sides of screen image. [▼] curves vertical edges inward, [▲] curves vertical edges outward.

PIN BALANCE curves the screen's vertical edges to the left or right. [▼] curves vertical edges to left, [▲] curves vertical edges to right.

TRAPEZOID/PARALLELOGRAM Press the 2 button to select Trapezoid or Parallelogram.

TRAPEZOID makes vertical edges of screen image parallel. [▼] narrows top and widens bottom, [▲] widens top and narrows bottom.

PARALLELOGRAM slants vertical edges of screen image to left or right. [▼] slants vertical edges to left, [▲] slants vertical edges to right.

TILT rotates entire screen image. [▼] rotates screen image counter-clockwise. [▲] rotates screen image clockwise.

DEGAUSS There are two ways to degauss the monitor; automatically by turning the monitor on, or manually by selecting the Degauss control from the OnView Main Menu.

Important: *Do not degauss repeatedly. Doing so can be harmful to the monitor. Wait at least 20 minutes (before selecting this control again).*

VIEWMATCH® COLOR provides four color adjustment options: four preset color temperatures and **USER COLOR** which allows you to adjust red and blue (green is fixed).

Press [▼] or [▲] to select one of the three color temperatures shown below, then press the 2 button to activate it. Selecting and activating **USER COLOR** displays the screen shown on page 10.

VIEWMATCH COLOR	↑
9300K	
6500K	
5000K	
USER COLOR	
	↓
EXIT: 1	SELECT: 2

NOTE: The factory setting for the monitor is 9300°K, the color temperature most frequently used in rooms with fluorescent lights.

ENGLISH

Downloaded from www.Manualslib.com manuals search engine

VIEWMATCH® COLOR, continued

USER COLOR

RED		
BLUE		
GREEN	FIXED	
EXIT: 1		BLUE: 2

From this screen, press the 2 button to select Red or Blue. Then press [▼] or [▲] to adjust.

LANGUAGE allows you to choose from among five language for the OnView® menus and adjustment screens; English, French, German, Italian, and Spanish. To select a language, press the 2 button. To exit this screen, press the 1 button.

OSD POSITION allows you to move any OnView screen (mei or adjustment screen) up, down, left, or right. Press the 2 butt to select Vertical OSD or Horizontal OSD.

H. OSD POSITION (Horizontal OSD Position)
Press [▼] or [▲] to move the OSD left or right.

V. OSD POSITION (Vertical OSD Position)
Press [▼] or [▲] to move the OSD up or down.

MEMORY RECALL returns adjustments back to factory settings only if the monitor is operating in a factory preset mode (page 11).

Exception: This control does not affect changes made with th **User Color** control, which allows you to adjust red, green, an blue individually.

VIEWMETER® displays the frequency signal input (horizont scan and refresh rate) coming from the graphics card in your computer.

NOTE: See your graphics card's user guide for more details. Also see the ViewSonic® web site (on the back cover) for tips on maximizing your monitor's refresh rate so the screen imag does not flicker, preventing possible eye-strain.

Downloaded from www.Manualslib.com manuals search engine

Other Information

Specifications

CRT	Type	17" (16.0 viewable diagonal area) 0.23mm Dot Pitch (H), 0.13mm Dot Pitch (V) , 0.27mm Dot pitch (D) , 90° deflection
	Phosphor	RGB, medium short persistence
	Glass surface	Anti-reflective and anti-glare coating Standard light transmission rate = 46%
Input Signal	Video	RGB analog (0.7 Vp-p, 75 ohms),
	Sync	f_h: 30-70 kHz, f_v: 50-120 Hz, H/V Separate (TTL),
Compatibility	PC	Up to 1280 x 1024 NI
	Macintosh®*1	Power Macintosh®
Maximum Refresh Rates*2		1280 x 1024 NI @ 66 Hz 1024 x 768 NI @ 87 Hz 832 x 624 NI @ 106 Hz 800 x 600 NI @ 110 Hz 640 x 480 NI @ 120 Hz
Power	Voltage	AC 100-240 VAC (auto switch) 50-60 Hz
Display Area	Factory setting	310 mm (H) x 230 mm (V) typ
	Full scan	320 mm (H) x 240 mm (V)
Operating Conditions	Temperature	32°F to 104°F (0°C to 40°C)
	Humidity	5% to 95% (no condensation)
	Altitude	To 10,000 feet (3,048 m)
Storage Conditions	Temperature	-40°F to +140°F (-40°C to +60°C)
	Humidity	5% to 95% (no condensation)
	Altitude	To 40,000 feet (12,192 m)
Dimensions	Physical	405 mm (W) x 418.5 mm (H) x 421 mm (D)
	(monitor)	15.9" (W) x 16.5" (H) x 16.6" (D)
Weight	Net	16.5 kgs (36.3 lbs) Monitor only
Regulations		UL, CUL, ISO9241-3, DHHS, FCC-B, CE, ENERGY 2000, PTB, ENERGY STAR, MPR II, CSA, DOC-B, TUV ERGO, NOM, TUV/GS, VCCI, BCIQ, CCIB, S-MARK, C-TICK, NEMKO, SEMKO, DEMCO.FEMKO.B-MARK.DOC
Power saving modes	On	<100W (green LED)
	DPMS™ Suspend	<15W (orange LED)
	DPMS Off	<3W (blinking orange LED)

Preset Timing Modes (Pre-adjusted to **VESA® 1024 x 768 @ 75 Hz**)

VGA 640 x 400 @ 70 Hz	VESA 800 x 600 @ 85 Hz	VESA 1280 x 1024 @ 60 Hz
VESA 640 x 480 @ 75 Hz	VESA 1024 x 768 @ 60 Hz	Macintosh 640 x 480 @ 67 Hz
VESA 640 x 480 @ 85 Hz	VESA 1024 x 768 @ 75 Hz	Macintosh 832 x 624 @ 75 Hz
VESA 800 x 600 @ 75 Hz	VESA 1024 x 768 @ 85 Hz	Macintosh 1024 x 768 @ 75 Hz

*1 *Macintosh computers require the supplied ViewSonic® Macintosh adapter.*

*2 ***Warning: Do not set the graphics card in your computer to exceed these maximum refresh rates. Doing so may result in permanent damage to the monitor. NI = Non Interlaced.***

Downloaded from www.Manualslib.com manuals search engine

Troubleshooting

ENGLISH

No power

- Make sure power button (or switch) is ON.
- Make sure A/C power cord is securely connected to the back of the monitor and to a power outlet.
- Plug another electrical device (like a radio) into the power outlet to verify that the outlet is supplying proper voltage.

Power on but no screen image

- Make sure the video cable supplied with the monitor is tightly secured to the video output port on the back of the computer. If the other end of the video cable is not attached permanently to the monitor, tightly secure it to the monitor.
- Adjust brightness and contrast.
- Check this user's guide to see if an adapter is required for proper signal continuity between graphics card and monitor.

Faint horizontal lines

- Caused by steel wires called Damper Wires. This is normal for all monitors that employ aperture grille technology, the source of superior, rich color.

Flickering

- Not enough power supplied. Connect the monitor to a different outlet. If using a surge protector, reduce the number of devices plugged in.
- Check the ViewMeter® from the main menu to verify the refresh rate (vertical frequency) is 75 Hz or higher. See "Specifications".
- Make sure the graphics card in your computer can use non-interlaced mode at the desired frequencies. To enable your graphics card to support higher refresh rates, try selecting fewer colors or running lower resolutions.
- Remove any devices from the area around the monitor that emits magnetic fields such as radios, surge protectors, unshielded speakers, fluorescent lights, AC power converters, desk fans, etc.

Wrong or abnormal colors

- If any colors (red, green, or blue) are missing, check the video cable to make sure it is securely connected. Loose or broken pins in the cable connector could cause an improper connection.
- Connect the monitor to another computer.
- Select Degauss from the Main Menu.
- If you have an older graphics card, contact ViewSonic® for a non-DDC adapter.

Entire screen image scrolls (rolls) vertically

- Make sure video input signals are within the monitor's specified frequency range.
- Try the monitor with another power source, graphics card, or computer system.
- Connect the video cable securely.

Control buttons do not work

- Press only one button at a time.

Downloaded from www.Manualslib.com manuals search engine

Cleaning the Monitor

- MAKE SURE THE MONITOR IS TURNED OFF.
- NEVER SPRAY OR POUR ANY LIQUID DIRECTLY ONTO THE SCREEN OR CASE.

ENGLISH

To clean the screen

1. Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles.
2. If still not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner onto a clean, soft, lint-free cloth, and wipe the screen.

To clean the case

1. Use a soft, dry cloth.
2. If still not clean, apply a small amount of a non-ammonia, non-alcohol based, mild non-abrasive detergent onto a clean, soft, lint-free cloth, then wipe the surface.

DISCLAIMER

ViewSonic® does not recommend the use of any ammonia or alcohol-based cleaners on the monitor screen or case. Some chemical cleaners have been reported to damage the screen and/or case of the monitor. ViewSonic will not be liable for damage resulting from use of any ammonia or alcohol-based cleaners.

Downloaded from www.Manualslib.com manuals search engine

LIMITED WARRANTY
VIEWSONIC *Z70* MONITORS

ENGLISH

What the warranty covers:
ViewSonic® warrants its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, **ViewSonic** will at its sole option repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components.

How long the warranty is effective:
ViewSonic *Z70* color monitor, including the display tubes, are warranted for three (3) years for all parts and three (3) years for all labor from the date of the first consumer purchase.

Who the warranty protects:
This warranty is valid only for the first consumer purchaser.

What the warranty does not cover:
1. Any product on which the serial number has been defaced, modified or removed.
2. Damage, deterioration or malfunction resulting from:
   a. Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
   b. Repair or attempted repair by anyone not authorized by **ViewSonic.**
   c. Any damage of the product due to shipment.
   d. Removal or installation of the product.
   e. Causes external to the product, such as electric power fluctuations or failure.
   f. Use of supplies or parts not meeting **ViewSonic**'s specifications.
   g. Normal wear and tear.
   h. Any other cause which does not relate to a product defect.
3. Removal, installation, and set-up service charges.

How to get service:
1. For information on obtaining warranted service, call **ViewSonic Customer Support.** See the back cover of this user's guide. You will need to provide your projector's serial number.
2. To obtain warranted service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
3. Take or ship the product prepaid in the original container to your **ViewSonic** dealer, any **ViewSonic** service center or **ViewSonic.**
4. For additional information or the name of the nearest **ViewSonic** service center, contact your **ViewSonic** dealer or **ViewSonic.**

Limitation of implied warranties:
THERE ARE NO WARRANTIES, EXPRESSED OR IMPLIED, WHICH EXTEND BEYOND THE DESCRIPTION CONTAINED HEREIN INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Exclusion of damages:
VIEWSONIC'S LIABILITY IS LIMITED TO THE COST OF REPAIR OR REPLACEMENT OF THE PRODUCT. **VIEWSONIC** SHALL NOT BE LIABLE FOR:
1. DAMAGE TO OTHER PROPERTY CAUSED BY ANY DEFECTS IN THE PRODUCT, DAMAGES BASED UPON INCONVENIENCE, LOSS OF USE OF THE PRODUCT, LOSS OF TIME, LOSS OF PROFITS, LOSS OF BUSINESS OPPORTUNITY, LOSS OF GOODWILL, INTERFERENCE WITH BUSINESS RELATIONSHIPS, OR OTHER COMMERCIAL LOSS, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
2. ANY OTHER DAMAGES, WHETHER INCIDENTAL, CONSEQUENTIAL OR OTHERWISE.
3. ANY CLAIM AGAINST THE CUSTOMER BY ANY OTHER PARTY.

Effect of state law:
This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

Sales outside the U.S.A.:
For **ViewSonic** products sold outside of the U.S.A., contact your **ViewSonic** dealer for warranty information and service.

REV 2/24/99

Downloaded from www.Manualslib.com manuals search engine